

This is a chart to help you remember the key points in operating a HYTORC tool system.

- BEWARE OF YOUR REACTION AREA
- MAKE SURE THAT YOUR HOSE CONNECTIONS ARE TIGHT
- INSPECT HOSES FOR DAMAGE
- MAKE SURE YOU HAVE 25 AMPS TO OPERATE WITH
- MAKE SURE THAT YOU HAVE THE CORRECT [TORQUE CHART](#) TO WORK WITH
- ALWAYS SET PUMP PRESSURE STARTING AT LOWER PSI SETTING, THEN INCREASING TO A HIGHER PSI SETTING
- MAKE SURE THE GAUGE RETURNS TO ZERO (0) BEFORE USING
- CYCLE TOOL 3 TO 5 TIMES TO ENSURE THE TOOL IS FUNCTIONING PROPERLY
- CHECK PUMP OIL LEVEL BEFORE USING & SERVICE PUMP EVERY 50 HOURS ACCORDING TO PUMP SPECIFICATIONS
- MAKE SURE TOOL HAS BEEN GREASED

IF YOU HAVE ANY QUESTIONS, [PLEASE CONTACT YOUR AREA MANAGER.](#)

Send Tool and Pump Repairs to:

HYTORC West
ATTN: Repair Department
224 West 100 South
Bancroft, ID 83217
Office Phone: (208) 648-0897
Office Fax #: (208) 648-9970